




Canon PowerShot A540 Back Cover Replacement

Replace the back cover.

Written By: Carley Fuller

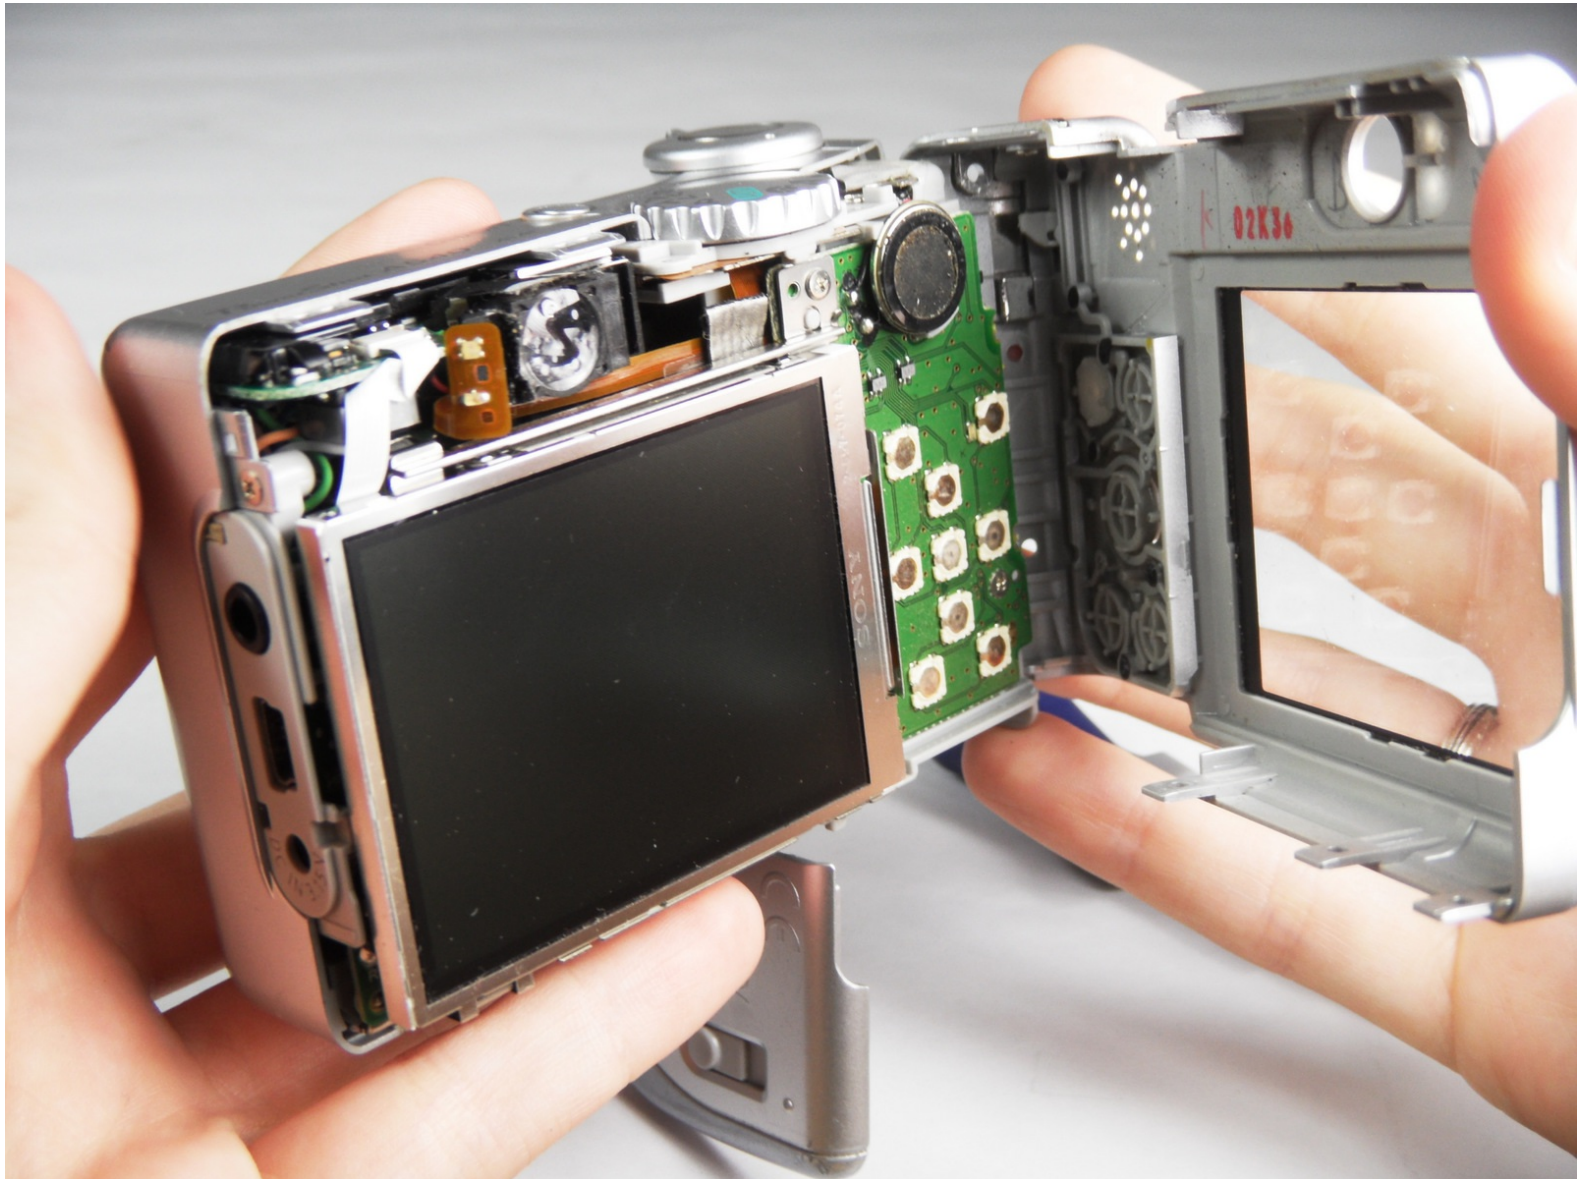



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Turn off the camera.
- Turn the camera upside-down and press the tab to release the battery cover. Remove the batteries.

Step 2



- Turn the camera upside down to view the "Card/Batt. Open" Cover.
- Use a Phillips head #000 screwdriver to remove the three (3) 4.0 mm screws.

Step 3




- Open "Card/Batt. Open" Cover.
- Remove the one (1) 5.0 mm screw with the Phillips head #000 screwdriver.

Step 4




- Turn the camera to the right side of the LCD screen.
- Remove the three (3) 4.0 mm screws with the Phillips head #000 screwdriver.

Step 5

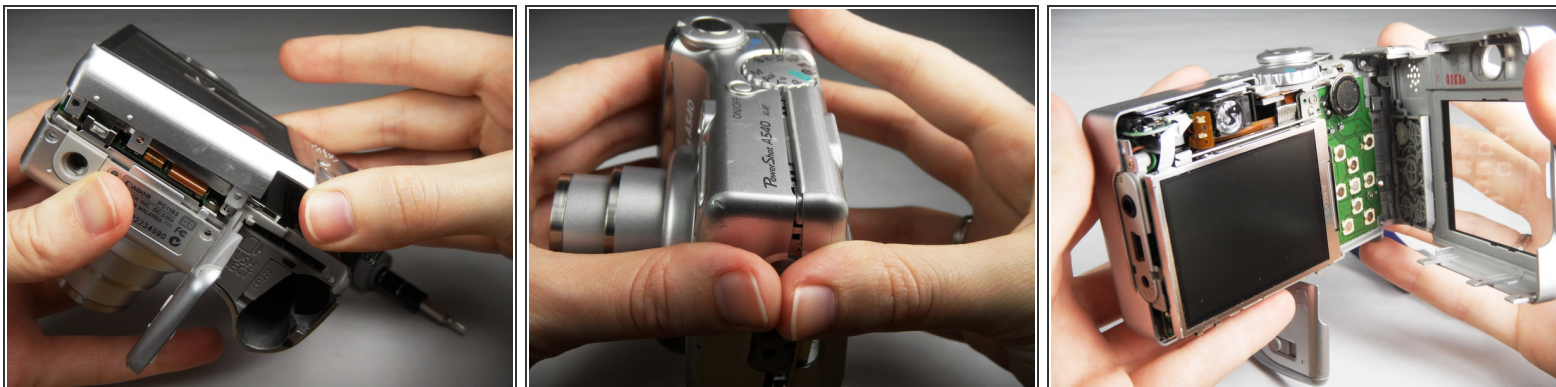

- Gently remove the back cover.
- Start at the bottom at the corner of the "Card/Batt. Open" Cover.
- Then move onto the other edges and the top.

 It may be tight at the top!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 04:43:05 PM.